Installation instruction

ARAT Special display mount for Navigation Systems

Part-No.: NS 1581
for Sony NAV-U50, NAV-U70
(with docking shoe)

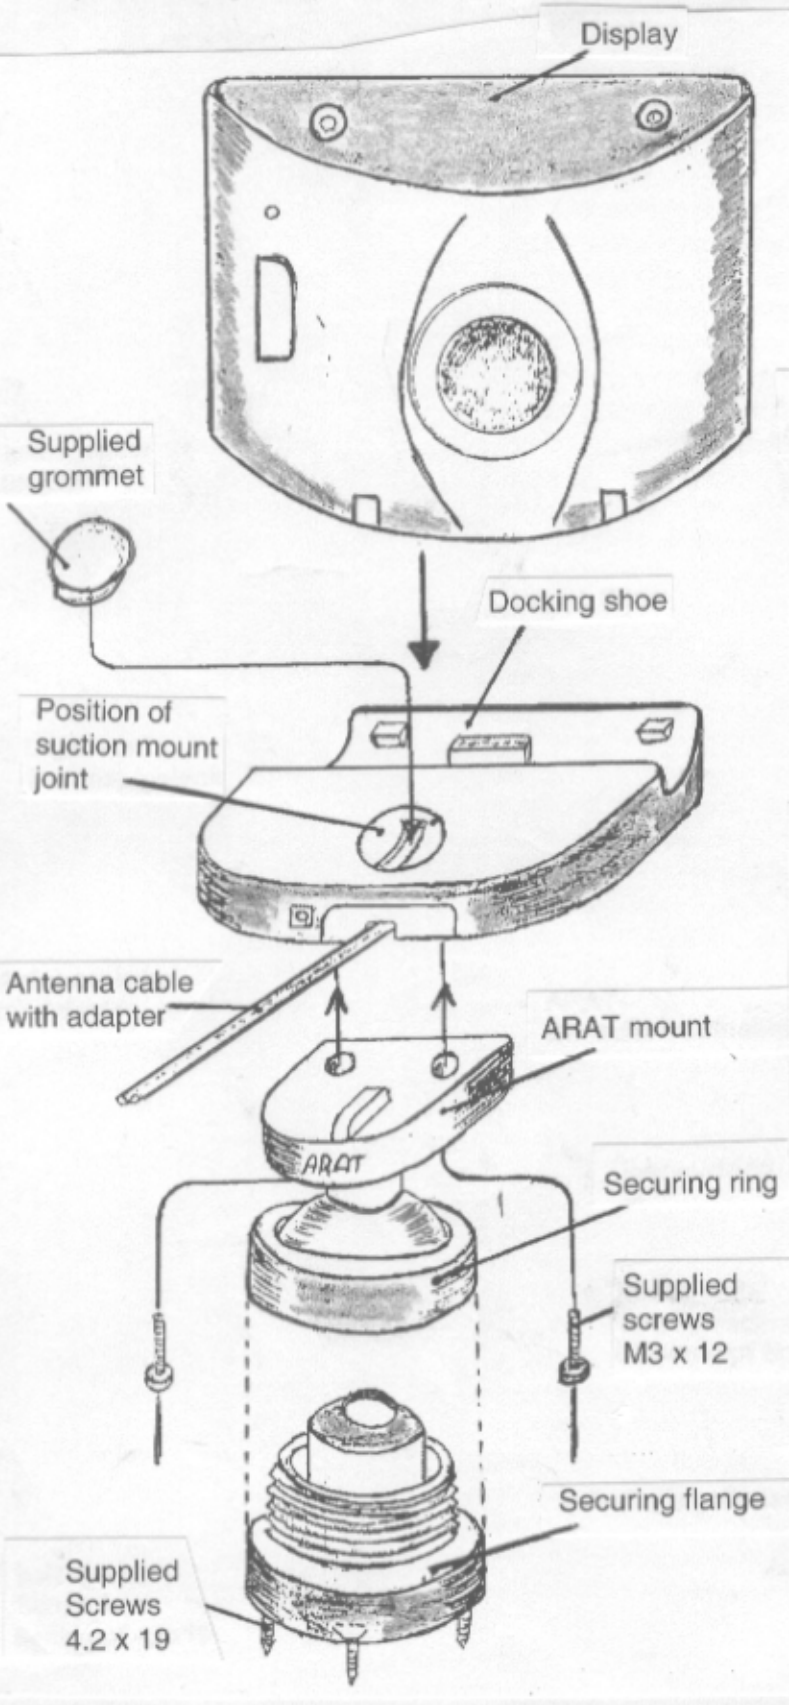

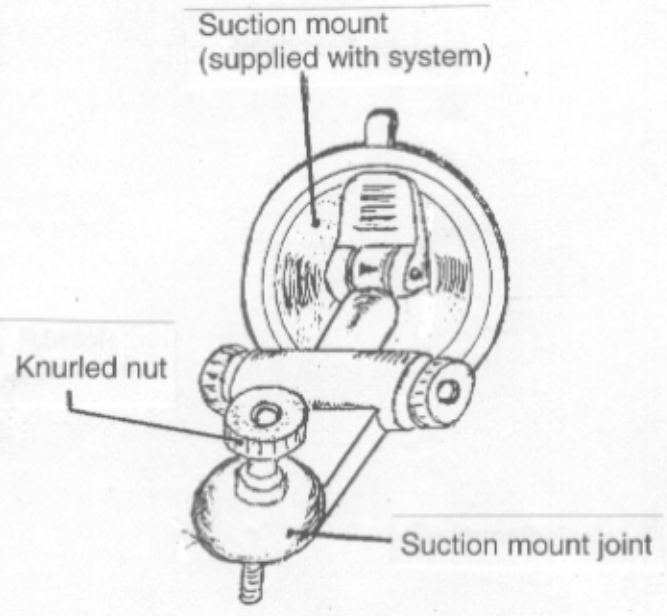

Installation instruction

1. If installed, remove the docking shoe from the suction mount (undo the knurled nut), if required place the antenna adapter in the docking shoe.
2. Place the ARAT mount to the contours of the docking shoe, secure with the supplied screws M3 x 12 through the mount into the threads on the underside of the docking shoe. Place the supplied grommet into the suction mount joint hollow. (if necessary secure with a small amount of glue)

Secure the display mount onto the ARAT car specific mount with the supplied screws 4.2 x 19

ARAT GmbH-Hauptstrasse-33758 Stukenbrock, Germany Tel: (+49) 5207-8952-52 Fax. (+49) 5207-8952-68
E-mail. info@arat.de Website. www.arat.de